

取 扱 説 明 書

INSTALLATION MANUAL

GR86/BRZ トランクリッドスポイラー

TRUNK LID SPOILER for GR86/BRZ

品番 (PART NUMBER)	663008
---------------------	--------

適合 (APPLICATION)	TOYOTA GR86 ZN8 SUBARU BRZ ZD8
---------------------	-----------------------------------

日本語 *****2p

English *****7p

- この取扱説明書を良く読んでからお使いください
- トヨタ自動車、SUBARUの発行する整備要領書と併せてお使いください
- 取り付け後も大切に保管してください
- 販売店様で取り付けをされる場合は本書を必ずお客様へお渡しください

TOMEI 製品のお買い上げありがとうございます。


トランクリッドスポイラーはドライカーボン製による軽量スポイラーです。
控えめなサイズに秘めた圧倒的な軽量性と質感は、ドライカーボンならではの研ぎ澄まされた存在感として、さりげなく“本物”を主張します。

- Read this manual carefully prior to the installation.
- Refer to the TOYOTA,SUBARU Service Manual with this Manual.
- Keep this manual for future reference after the installation has been completed.
- Give this manual to the owner when the installation was performed by another person or a shop.

Congratulations on your purchase of the quality TOMEI product.

TOMEI Trunk Lid Spoiler is made from lightweight dry carbon fiber.
Its compact design delivers the light weight and premium look that only dry carbon can offer, adding a subtle yet authentic motorsports touch to the rear of the vehicle.

構成部品 下記の内容/数量が揃っているかを確認してください。()内は同梱の数量です。

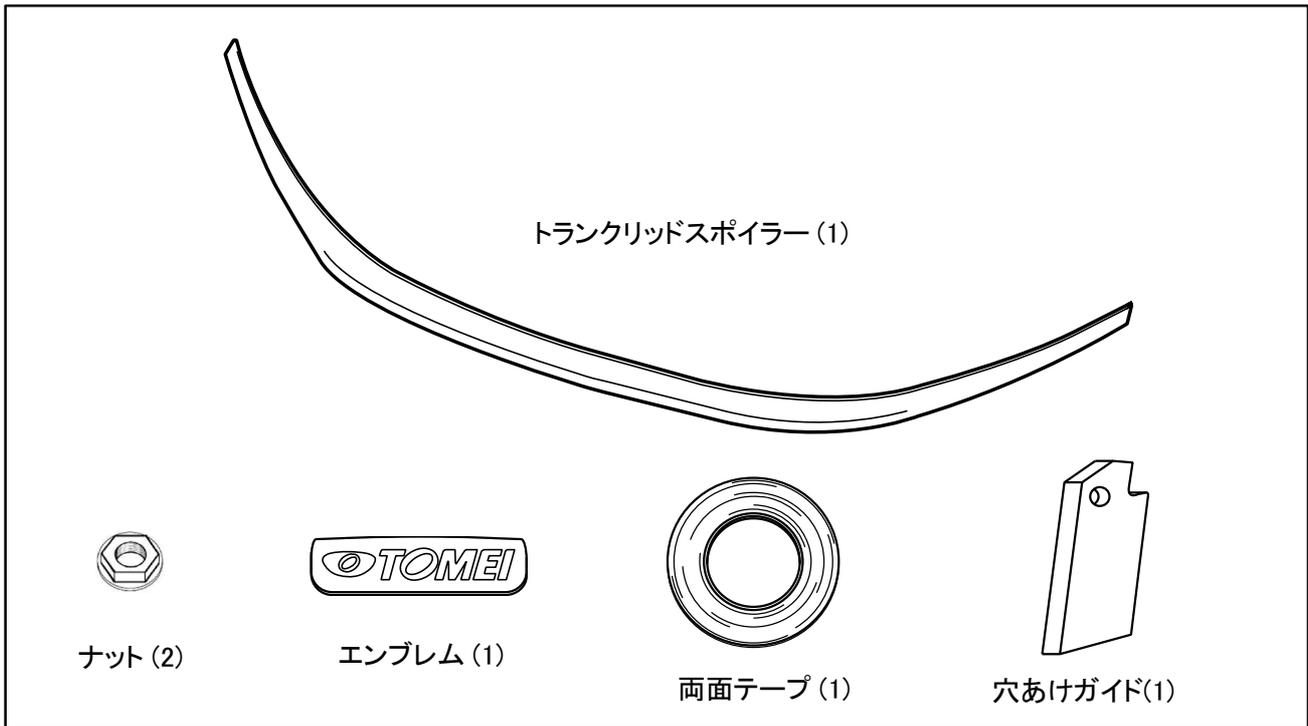

取り付けに必要な工具類

- ・エンジン整備用工具一式
- ・棒ヤスリ もしくは 小型ルーターなど
- ・φ6ドリル、ドリルドライバー
- ・マスキングテープもしくは保護シートなど


⚠ 注意

- 取り付けには、純正トランクリッドの取り外しおよび車両への穴あけ加工が必要となり、ボディに傷が付く可能性があります。
- 車両側には取り外しの際、ボディに傷がつかないように十分注意し、必要に応じて保護シートなどで養生の上取り付け作業を行ってください。
- 作業時は必要に応じて安全保護具を着用し、工具を使用する際も十分に注意してください。加工、装着の際は保護手袋、保護メガネ、防塵マスクなどを装着し、安全対策を施して作業を行ってください。
- 取り付け後は運行前に点検を行い、取り付け部の緩みや取り付け時の両面テープに剥がれがないようにしてください。破損した状態で使用すると、その破片などで事故を起こす恐れがありますのですみやかに使用を中止してください。

1. トランクガーニッシュの取り外し

! ここで記載するのは簡易手順です。各部の詳細な脱着方法は必ず整備要領書を参照してください。

1. バッテリーマイナス端子を取り外す。
2. トランクの内側の内装およびトランクガーニッシュを取り外す。

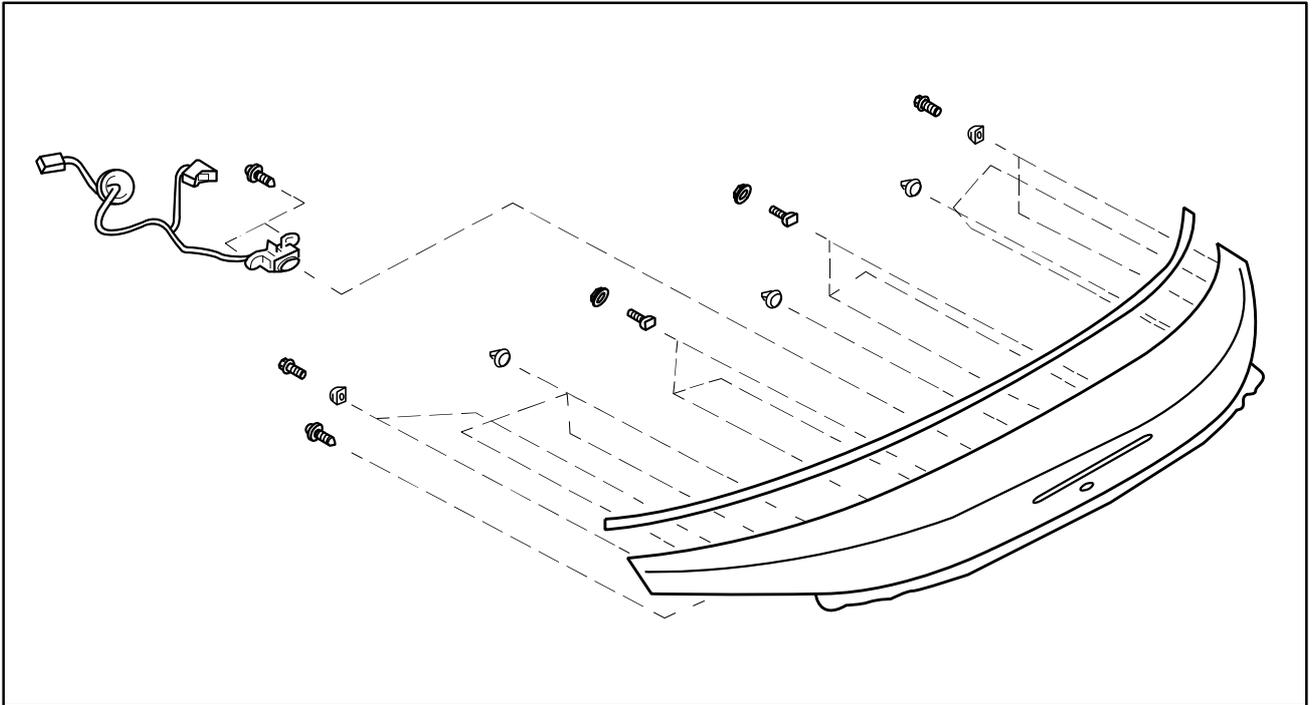


! 注意


- ・ トランクガーニッシュを取り外す際、トランクおよびトランクガーニッシュをマスキングテープなどで養生してください。
- ・ 取り外しの際、傷や打痕などがつく恐れがあります。十分に注意してください。
- ・ トランクガーニッシュを取り外す前に、ハイマウントストップランプとリアカメラのコネクターを取り外し、トランクのグロメットを押し込み、外しておくとその後のトランクガーニッシュを外す作業がスムーズにすすめられます。

2. トランクリッドスポイラーの取り付け

1. 付属の穴あけガイドを用いて取り付け穴を2か所あける。

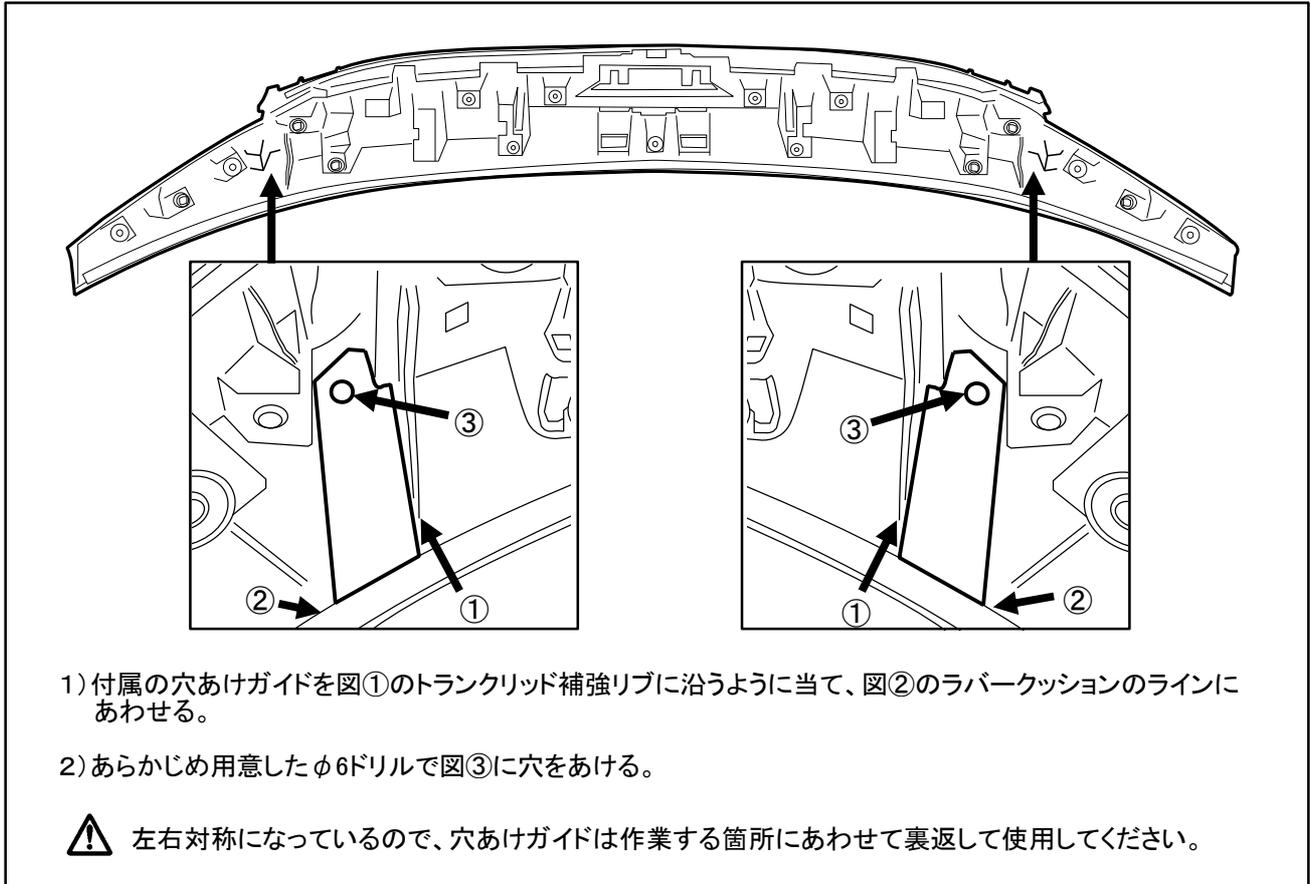

2. 1であけた穴を棒ヤスリや小型ルーターなどで内側に2mm程度長穴加工をする。

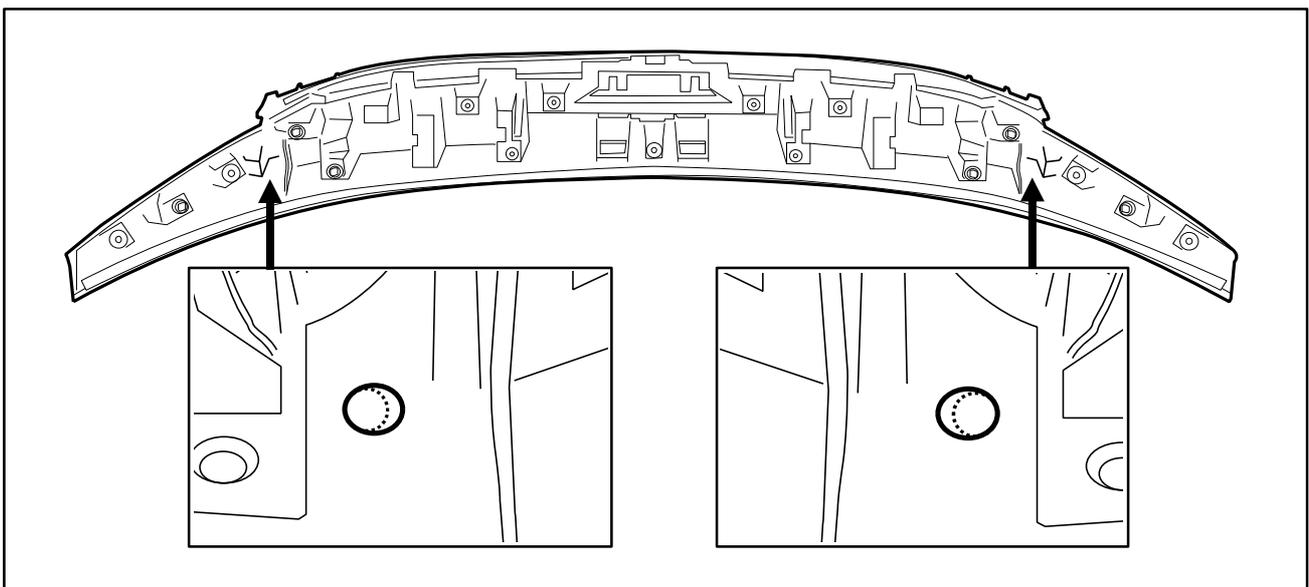

! 注意


トランクリッドスポイラーを近づけて、取り付け穴とトランクリッドスポイラーのスタッド位置にズレがないよう確認しながら長穴加工作業を行ってください。

3. 取り付け穴をあけたトランクガーニッシュにトランクリッドスポイラーを仮置きし、左右・前後の位置だしをする。

⚠ この時、マスキングテープなどで位置の目印を行っておくと、取り付け時にガイドとして役立ちます。

4. トランクリッドスポイラー裏側およびトランクガーニッシュの両面テープの貼り付け箇所を脱脂し、トランクリッドスポイラーの張り合わせ側に付属の両面テープを貼り付ける。

⚠ 脱脂の際、プライマーシートなどで拭くと、装着時の密着性が向上します。

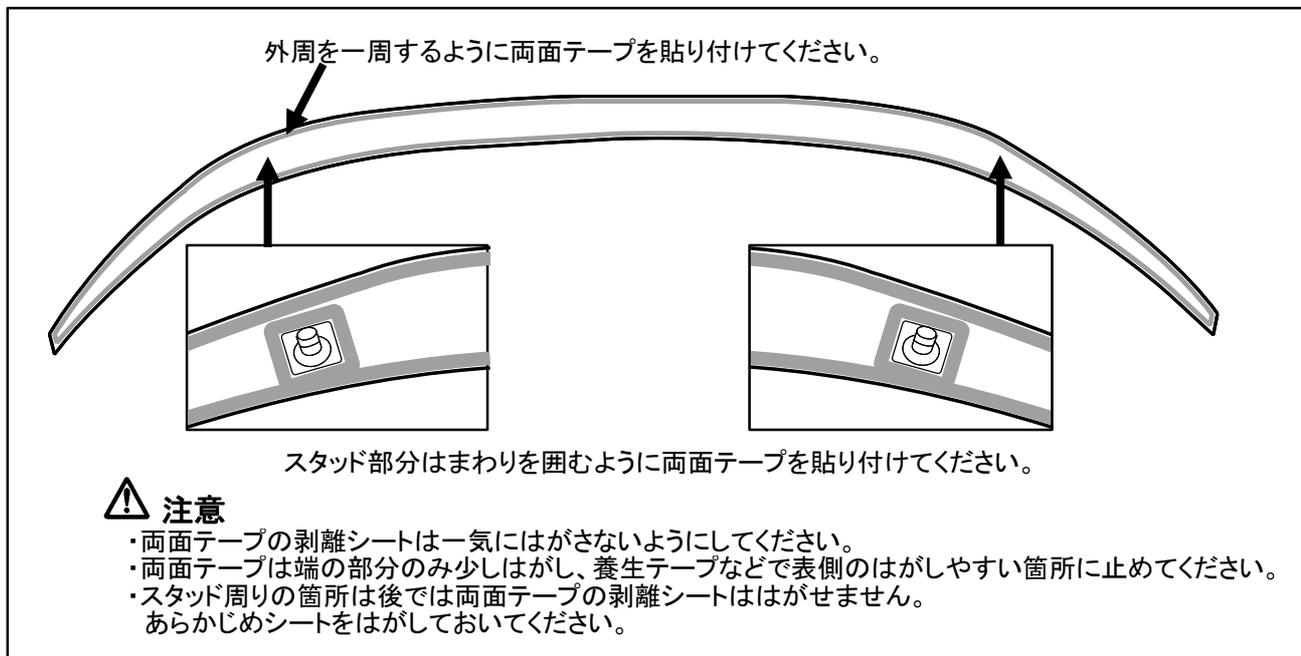

5. トランクリッドスポイラーを3で仮置きした位置で装着できるようマスキングテープなどで動かないよう固定する。


⚠ 剥離シートをはがしている箇所は粘着するので気を付けてください。
また、位置が決まったらずれないように作業を進めてください。

6. 両面テープの剥離シートをはがす。


全ての剥離シートをはがせたら、トランクリッドスポイラーをトランクガーニッシュに押し当て、両面テープを圧着する。

⚠ 剥離シートを無理に引っ張ると破断します。
剥離シートを引っ張ってもはがれにくい場合は、トランクリッドスポイラーを押し上げて隙間を広げながら作業を行ってください。

7. トランクリッドスポイラーの下図2か所のスタッドボルトをトランクガーニッシュに付属のナットで固定する。

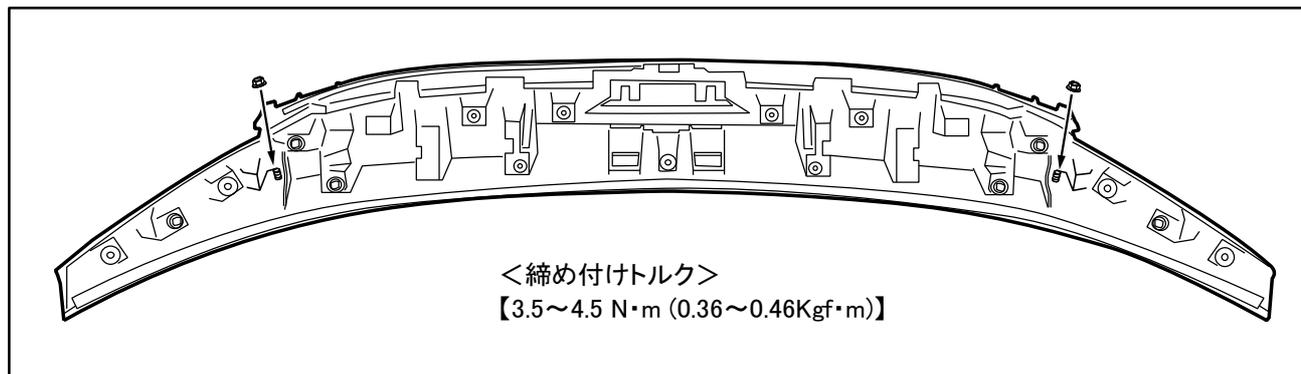

8. 付属のエンブレムをトランクリッドスポイラーに貼り付ける。

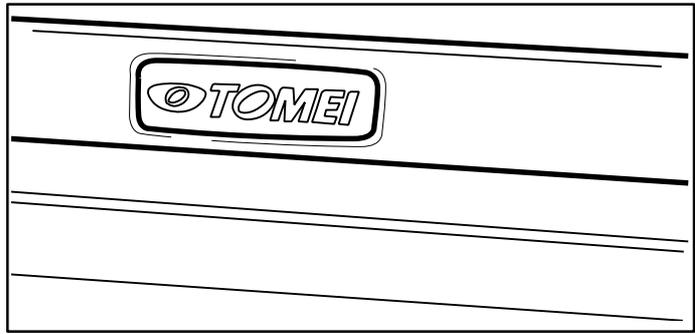


9. トランクガーニッシュおよびトランクの内側の内装など取り外した部品を車両へ復帰する。
10. バッテリーのマイナス端子を取り付ける。
11. ハイマウントストップランプ、リヤカメラ等電気システムの作動確認を行う。

⚠ 注意

圧着した両面テープを安定させるため、取り付け後3時間は車両を動かさないようにしてください。
また、本品取り付け後24時間は洗車、水拭きは控え、雨などが当たらないようにしてください。

KIT CONTENTS

This kit includes below contents. Quantity of each item are noted in brackets ().

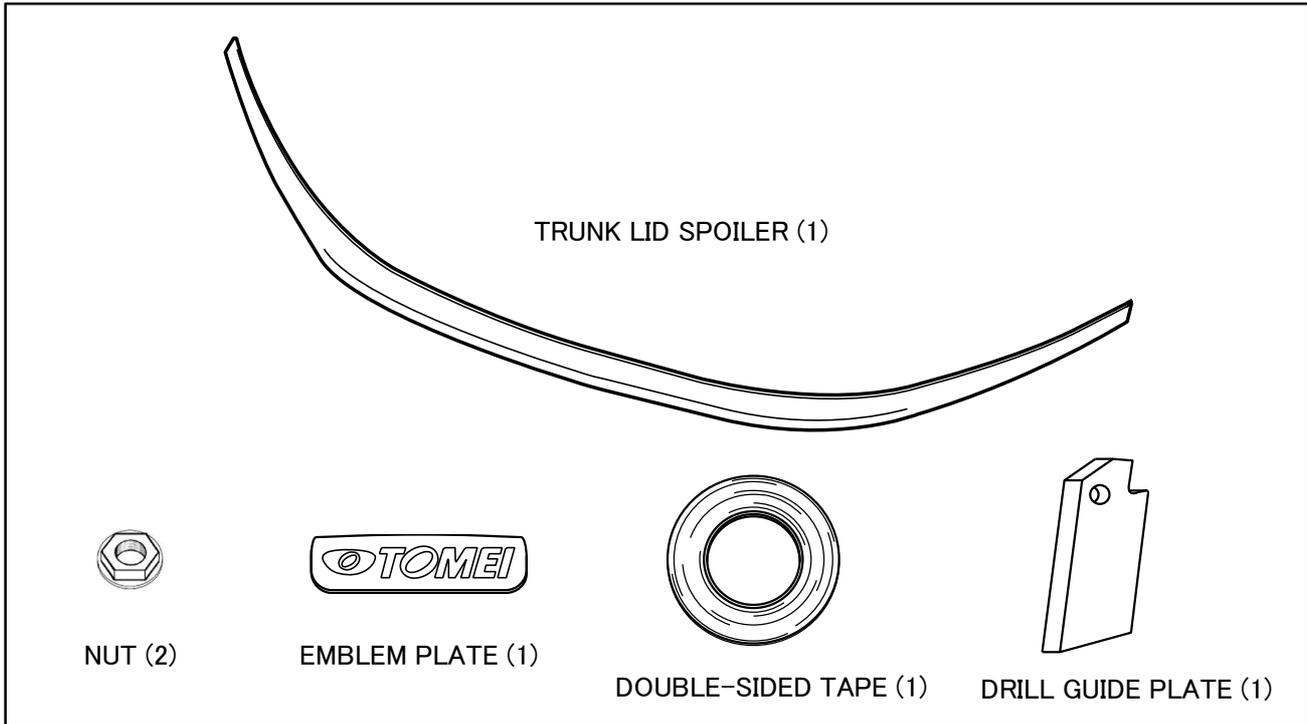

REQUIRED TOOLS

- General Engine Maintenance
- Round File and/or Mini Dremel
- 6mm Drill Bit and Drill Driver
- Masking Tape and Protection Sheet


CAUTION

- This installation requires removal of the factory trunk lid garnish and drilling holes in it. Failure to properly protect the surrounding area may result in damage to the vehicle body.
- Protect the surrounding area with protective sheet(s) to prevent damage to the vehicle body.
- Wear appropriate protective equipment such as safety glasses, work gloves, and a dust mask during installation. Handle all tools carefully.
- After installation is complete, verify that all components are securely mounted before operating the vehicle. Improper installation may result in serious damage to the vehicle and/or an accident during operation.

1. REMOVING THE TRUNK LID GARNISH

 This manual only provides the simple instructions. For more details please refer to the vehicles official service.

1. Disconnect the negative terminal from the battery.
2. Remove the inner trim and the trunk lid garnish.

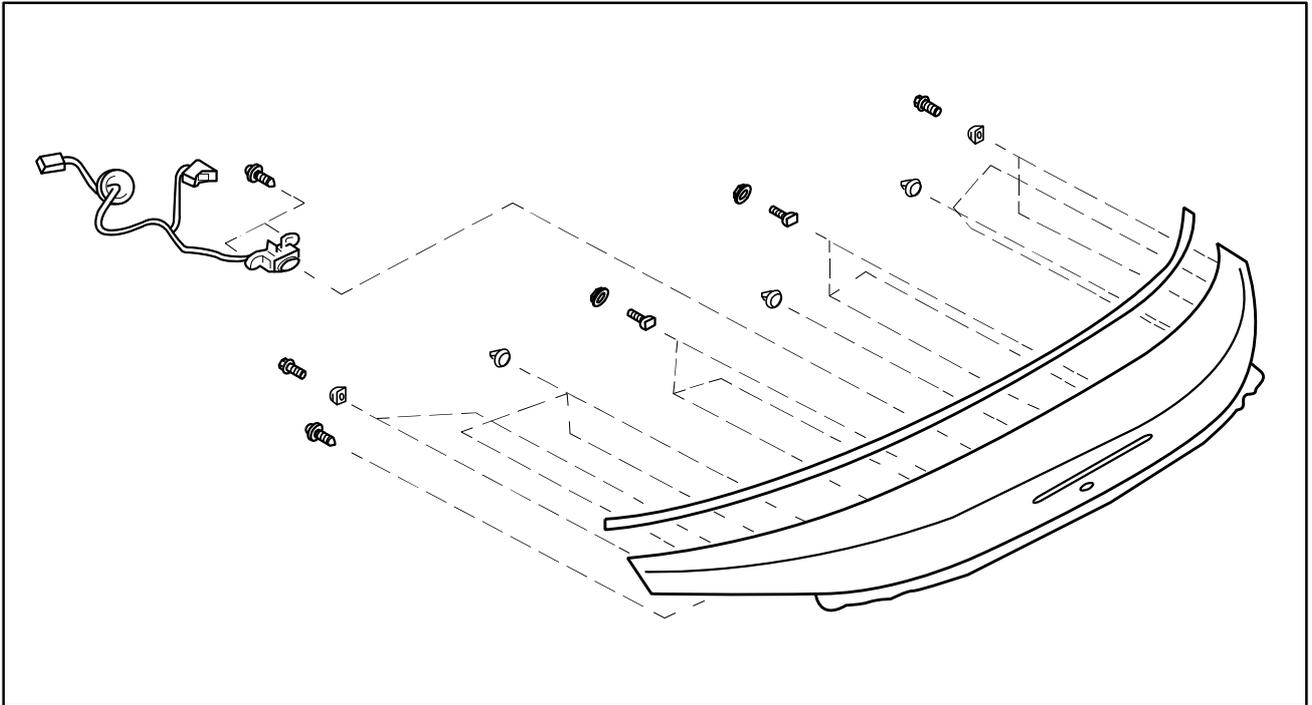


CAUTION


- Protect the surrounding area and the garnish using masking tape and protective sheet(s).
- Carefully remove the garnish to avoid damaging the vehicle body.
- Before removing the garnish, disconnect the wiring connectors for the third brake light and the backup camera. Disconnecting and separating the wiring harness from the garnish will make this procedure easier.

2. INSTALLATION OF TRUNK LID SPOILER

1. Drill 2 holes using the kit-included Drill Guide Plate.

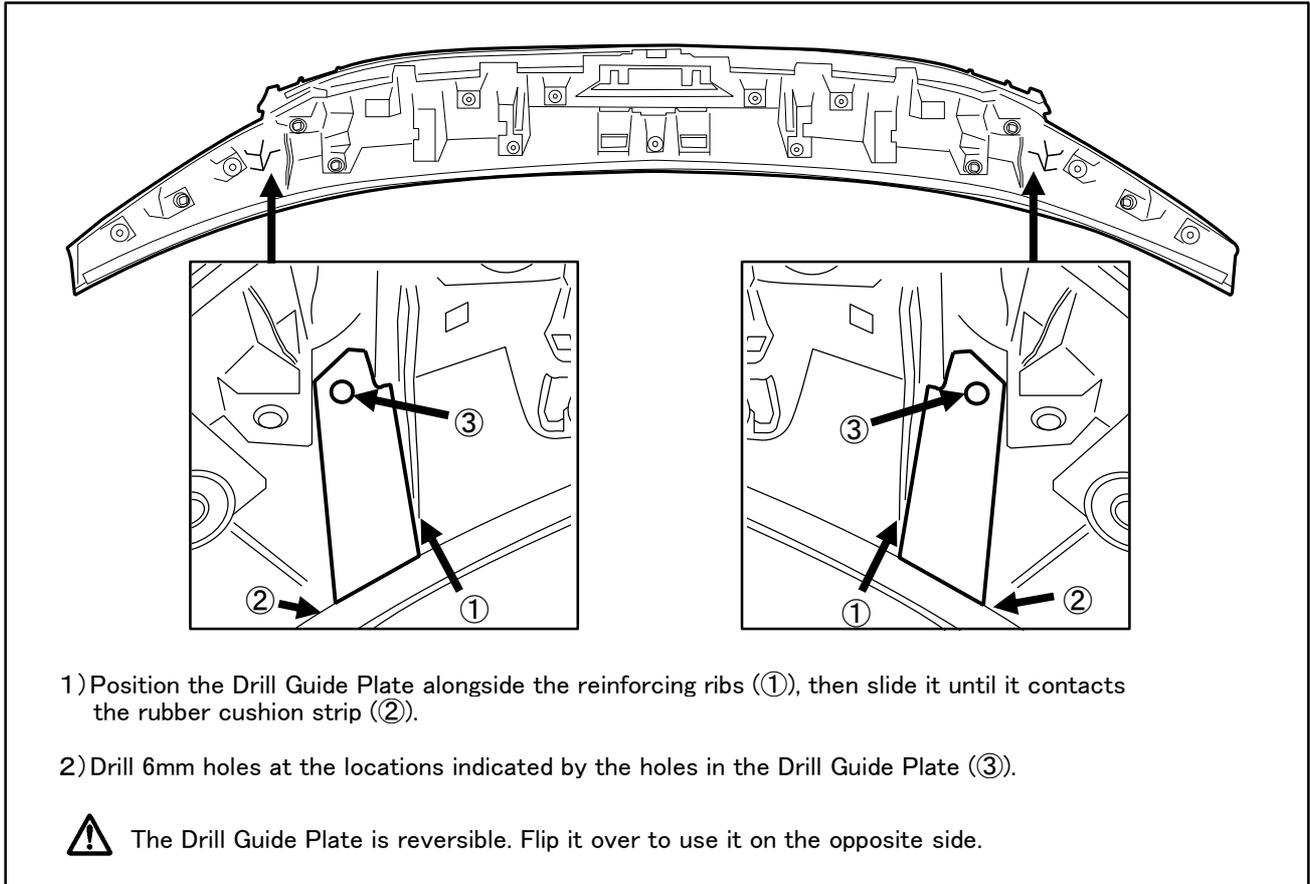

2. File the drilled holes 2mm toward the center to convert them into oval holes.

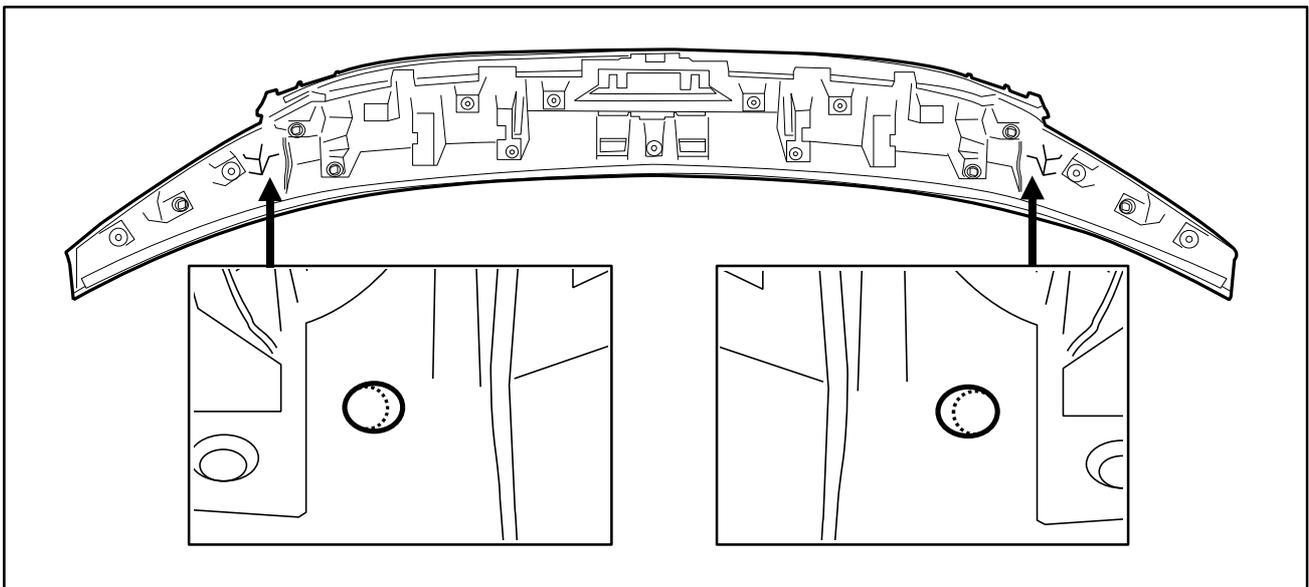

CAUTION

During the filing process, test-fit Trunk Lid Spoiler to ensure the holes align with the spoiler studs.


3. Place Trunk Lid Spoiler on the garnish and adjust its position.

 Mark the adjusted position with masking tape to use as a reference during later installation.

4. Clean and degrease the mating surfaces of the Trunk Lid Spoiler and the garnish.

Apply the supplied Double-Sided Tape to Trunk Lid Spoiler as shown in the diagram below.

 Applying an adhesion promoter is highly recommended to ensure secure adhesion.

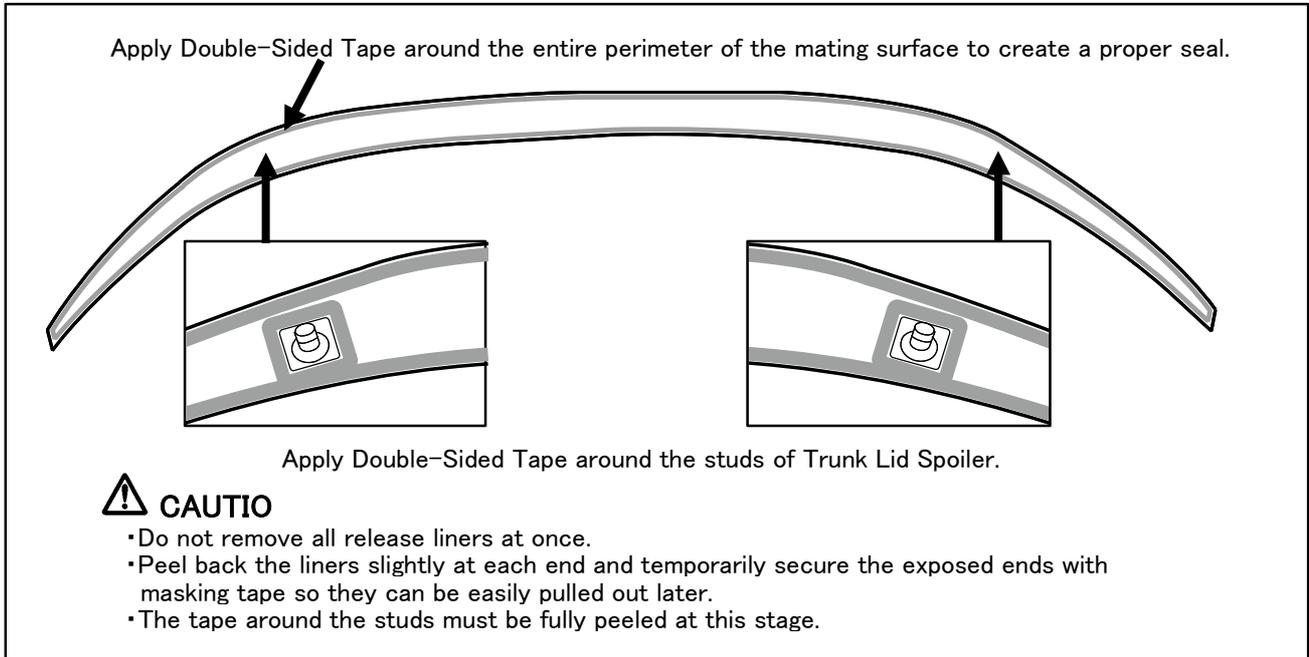

5. Place Trunk Lid Spoiler onto the garnish at the aligned position and temporarily secure it with masking tape.

 The areas where the release liners were previously peeled will adhere immediately upon contact. Position the spoiler carefully and do not attempt to reposition it once it has made contact.


6. Remove the remaining release liners by pulling the exposed ends from the outside.

Apply firm pressure to Trunk Lid Spoiler to ensure proper adhesion to the garnish.


 Peel the release liners slowly to prevent them from tearing.

If the liners are difficult to remove, gently lift the Trunk Lid Spoiler slightly to create a small gap and allow the liners to be pulled out more easily.

7. Install the supplied Nuts onto the studs of Trunk Lid Spoiler protruding through the garnish.

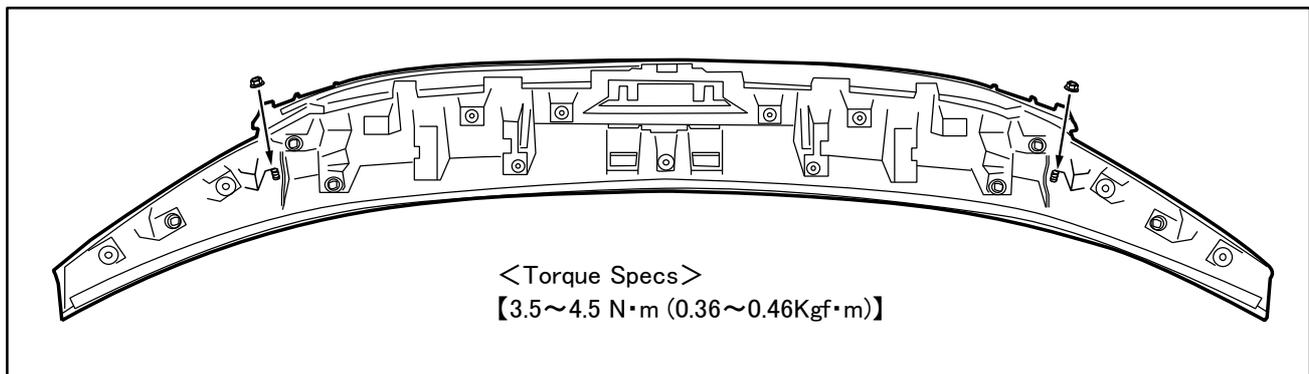

8. Attach the Emblem Plate to Trunk Lid Spoiler.

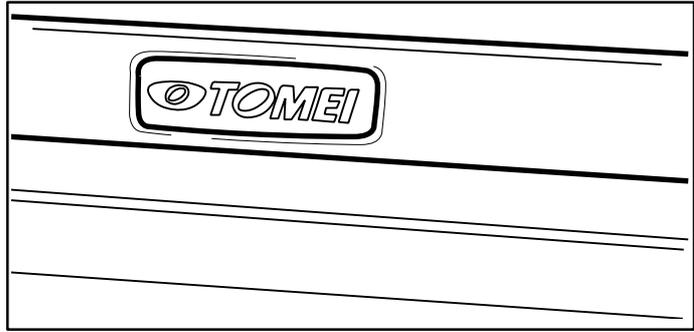

9. Reinstall all removed components in the reverse order of removal.

10. Reconnect the cars battery negative terminal.

11. Verify that the third brake light and the backup camera are operating properly.

⚠ CAUTION

Do not move the vehicle for at least 3 hours after installation to allow the adhesive to stabilize.
Keep the vehicle dry for at least 24 hours after installation.

TOMEI POWERED INC.

株式会社 東名パワード

〒194-0004 東京都町田市鶴間5-4-27

TEL : 042-795-8411 (代)

FAX : 042-799-7851

<http://www.tomei-p.co.jp>

この製品に関わる取り付け、操作上のご相談は上記へお願いします。
営業時間: 月～金(祝祭日、年末年始を除く)9:00～18:00

Please contact your local authorized distributor listed on our website
if you have any questions in regards to the installation / usage of this product.